

Infrared Thermometer KEW 5515




KEW 5515 Specifications

Infrared Thermometer		
	Measuring range	-32 - 535°C
	Accuracy	±3.0°C (-3220 °C), ±2.0°C (-20 - +100°C), ±2%rdg (100 - 535°C)
	Measuring element	Thermopile
	Infrared spectral band	5 - 14μm
	Measuring diameter	1000mm/ ø78mm (Distance/ Measuring dia.: 12:1)
	Repeatability	Within ±1°C
	Emissivity	Variable between 0.10 and 1.00 (by 0.01 steps), Before shipment: 0.95
	Collimation	Laser beam (Class 2, 630 - 670nm, 1mW or less) specifies the center.
Th	ermocouple	
	Thermocouple	K-type*
	Measuring range of thermocouple	-199 - 1372°C
	Accuracy of thermocouple	±1.5%rdg+1°C (-40 - 1372°C)
Response		500ms
Resolution		0.1°C
Auto power off		If no key is pressed for 6 seconds, the power is shut off automatically.
LCD display		LCD with back light (blinks in red when alarm function is activated)
Dual display		Simultaneous display (Measured value and either of max, min, average or thermocouple value.)
Operating temperature & humidity		0 - 50°C/ 10 - 90% RH
Applicable standards		IEC 61326, IEC 61000-4-2, IEC 61000-4-3, IEC 61000-4-8, IEC 60825-1
Battery		6F22(9V) × 1
Dimension		180 (L)×130 (W)×40 (D) mm
Weight		Approx. 195g (excluding battery)
Accessories		9152(Carrying case), 6F22(9V) × 1, Instruction manual

^{*} Commercial K-type thermocouple can be used with the product.

Display / Buttons

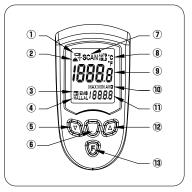

- ① Battery mark
- 2 Laser mark
- 3 Thermocouple TC
- 4 Upper/ Lower limit alarm [HAL/LAL]
- (5) Cursor button (Down)
- **6** Buzzer button
- ③ SCAN/ HOLD/ AUTO
- ® Unit
- Main display
- 10 MAX/ MIN/ AVG
- 11) Sub display
- ¹² Cursor button (Up)
- [®] Function button


LCD back light



Dual display



Relation of distance and measuring diameter

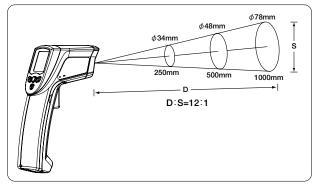



DANGER

The connector for thermocouple is not insulated. Do not make measurement using a thermocouple when there is a risk of electrical shock hazard.



WARNING

KEW5515 is one of the portable laser applied instruments which are regulated by the consumer product safety law.

- Do not look into the laser beam.
- Do not aim the laser beam at human beings.
- Keep the instrument out of children's reach.



Please read the "Safety Warnings" in the instruction manual supplied with the instrument thoroughly and completely Safety Warnings: for correct use. Failure to follow the state values of control to the correct use. Failure to follow the state values are the state value of the correct use. Therefore, make sure to operate the instrument on a correct power supply and voltage rating marked on each instrument.

COSINUS Messtechnik - Ihr Partner für Messlösung in allen elektrischen und physikalischen Anwendungen

COSINUS Messtechnik GmbH

Rotwandweg 4 82024 Taufkirchen

Tel.: 089 / 66 55 94 - 0 Fax: 089 / 66 55 94 - 30